





# 3511

**PRIMUS**  
ESSENTIAL TRAIL  
STOVE

Design and Quality Primus AB Sweden  
Tel: +46 8 564 842 30  
[www.primus.se](http://www.primus.se)

CE -2531-19 ID: 2531CU-0102

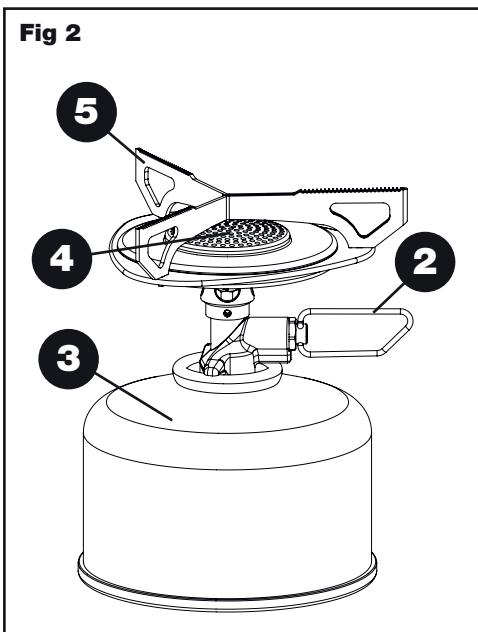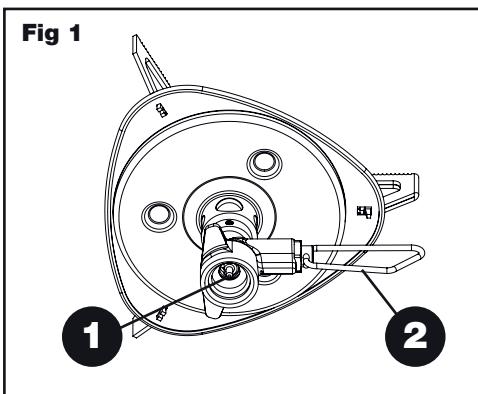

## 3511 PRIMUS Essential Trail Stove INSTRUCTIONS FOR USE

**IMPORTANT:** Read these instructions carefully and familiarize yourself with the product before fitting the appliance to the LP Gas cartridge. Review the instructions periodically to maintain awareness. Retain these instructions for future reference.

### USE OUTDOORS ONLY!

**NEVER** cover the stove (gas cartridge) with wind shields, rocks or similar which may cause "over heating" and damage the stove and cartridge. Overheating a gas cartridge by this means is highly dangerous.

### 1. INTRODUCTION

- 1.1 This appliance shall be used exclusively with Primus Propane/Butane/Lsubutane mix cartridges 2206, 2202 and 2207.
- 1.2 It may be hazardous to attempt to fit other types of gas cartridges.
- 1.3 Gas consumption:  
135 g/h, 1.88 kW (CE). 10 000 Btu/h (ANSI).
- 1.4 Jet nipple: 0.32 mm.
- 1.5 This gas appliance conforms to the provisions of EN521/ANSI Z21.72-16/CSA 11.2-16.

### 2. SAFETY INFORMATION (fig.1)

- 2.1 Ensure that the appliance seals (1) are in place and in good condition before fitting the gas cartridge. O-ring shall be loosely fitted in the valve body.
- 2.2 The appliance should be used outdoors only.
- 2.3 The appliance must be operated on a level surface.
- 2.4 Make sure that no inflammable materials are near the gas appliance, see section 5.6.
- 2.5 Always change or fit the gas cartridge in a safe place, only outside, away from any source of ignition such as naked flames, pilot lights, electric fires and away from other people.
- 2.6 If you have to check the gas soundness of the appliance, do this outdoors. Do not check for leaks with a naked flame. Use soapy water only.
- 2.7 Never use an appliance with damaged or worn seals and never use a leaking, damaged or malfunctioning appliance.
- 2.8 Never leave the appliance unattended when lit.
- 2.9 Do not allow pans to boil dry.

### 3. HANDLING THE APPLIANCE

- 3.1 Be careful not to touch hot parts of the appliance during, or after use.
- 3.2 Storage: Always unscrew the cartridge from the appliance when not in use. Store them in a safe dry place away from heat.
- 3.3 Do not misuse the appliance, or use it for anything for which it has not been designed.
- 3.4 Handle the appliance with care. Do not drop it.

### 4. ASSEMBLING THE APPLIANCE (fig.2)

- 4.1 Make sure that the control knob (2) is fully closed (by turning it clockwise as far as it will go).
- 4.2 Keep the cartridge (3) upright when fitting it to the valve.
- 4.3 Place the valve squarely on top of the cartridge (as shown in fig.2).
- 4.4 Gently screw the cartridge into the valve until it meets the O-ring of the valve. Be careful not to fit the cartridge cross

threaded. **Screw hand tight only. Do not overtighten or you will damage the cartridge valve.**

- 4.5 Ensure that a complete gas seal has been made. If you have to check the gas soundness of the appliance, do this outdoors. Do not check for leaks with a naked flame. Use soapy water only, applied to the joints and connections of the appliance. Any leakage will show up as bubbles around the leakage area. If you are in doubt or you can hear or smell gas, do not attempt to light the appliance. Unscrew the cartridge and contact your local dealer.
- 4.6 The stove is now ready for use.

### 5. OPERATING THE APPLIANCE

- 5.1 Always operate the appliance on firm level of surface.
- 5.2 Turn the knob anticlockwise (2) and light the burner (4) immediately.
- 5.3 Adjust the size of the flame by turning the control knob (2).
- 5.4 After lighting, operate the appliance upright and do not move it around. Flaring may occur if the appliance has not fully warmed, or if it is moved carelessly.
- 5.5 After use, ensure that the valve is fully shut (control knob turned fully clockwise).
- 5.6 Distance to inflammable materials must be ensured. Minimum distance to combustibles at least 500 mm (20 inches) from sides and from top. **To avoid a fire hazard these minimum distances must be complied with.**

### 6. CHANGING THE CARTRIDGE

- 6.1 Shut the valve fully. Be sure the flame is extinguished and no other flame is nearby. Take the unit outdoors away from other people. Unscrew the cartridge from the valve and replace the appliance sealing O-ring if it is cracked or worn. Avoid cross threading by putting the valve onto the cartridge screw thread squarely and screw on hand tight only, as described in section 4.

### 7. ROUTINE SERVICE AND MAINTENANCE

- 7.1 Always ensure that the O-ring sealing is in place and in good condition. Always check this each time prior to fitting the appliance. Replace the O-ring if it is damaged or worn.
- 7.2 New sealing O-rings are available from your local dealer.

### 8. SERVICE AND REPAIR

- 8.1 If you cannot rectify any fault by following these instructions, return the appliance to your local retailer.
- 8.2 Never attempt any other maintenance or repair.
- 8.3 Never modify the appliance. This may cause the appliance to become unsafe.

### 9. SPARES AND ACCESSORIES

- 9.1 Use only Primus brand spares and accessories. Be careful when fitting spares and accessories. Avoid touching hot parts.
- 9.2 Replacement Cartridges: Use only Primus 2206, 2202, 2207 Propane/Butane mix gas cartridges with this appliance.
- 9.3 Spare parts
  - 734350 Jet nipple
  - 732440 O-ring
- 9.4 In the event of difficulties in obtaining spare parts or accessories, consult the distributor in your country. Visit [www.primus.eu](http://www.primus.eu)





























**WARNING  
FIRE EXPLOSION HAZARD**

If you smell gas

1. Do not attempt to light appliance.
2. Extinguish any open flame.
3. Disconnect from fuel supply.
4. Evacuate immediately.
5. Allow gas to dissipate 5 minutes before relighting the appliance.

Failure to follow these instruction could result in fire or explosion, which could cause property damage, injury or death.

**FOR YOUR SAFETY**

Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance.

**DANGER**

**CARBON MONOXIDE HAZARD**

This appliance can produce carbon monoxide which has no odour. Using it in an enclosed space can kill you. Never use this appliance in an enclosed space such as a camper, tent, car or home.



Keep stove area clear and free from combustible materials, gasoline and other flammable vapors and liquids.



See too that no obstruction of combustion or ventilation occur.



See too that the flame on the appliance is steady. The flame shall always leave the stove straight upwards. Note! Wind may press the flame down under the burner, if that happens stop the stove immediately and move it to a wind protected area.



When the stove is in storage, the gas canister has to be disconnected.

**DANGER  
RISQUE DE FEU OU D'EXPLOSION**

Que faire si vous sentez du gaz :

1. Ne pas tenter d'allumer l'appareil.
2. Éteindre toute flamme.
3. Couper l'alimentation en gaz à la source.
4. Évacuer immédiatement.
5. Permettre au gaz de se dissiper pendant 5 minutes avant d'allumer à nouveau l'appareil.

Le non-respect pour ces instruction peut causer un incendier ou une explosion, qui pourrait entraîner des dommages matériels, des blessures ou la mort.

**POUR VOTRE SÉCURITÉ**

Ne pas entreposer ni utiliser d'essence, dont les vapeurs et liquides sont inflammables, à proximité du présent appareil ou de tout autre appareil.

**DANGER**

**OXYDE DE CARBONE**

Le présent appareil peut produire de l'oxyde de carbone, un gaz inodore. L'utilisation de l'appareil dans un espace clos peut entraîner la mort. Ne jamais utiliser l'appareil dans un espace clos comme un véhicule de camping, une tente, une automobile ou une maison.



Écarter de la zone du réchaud tout matériel combustible, essence et autres vapeurs et liquides inflammables.



Veiller à ce qu'il n'y ait pas d'obstruction à la combustion ni à la ventilation.



Veiller à ce que la flamme de l'appareil soit stable. La flamme devrait toujours jaillir verticalement du réchaud. Attention! Le vent peut rabattre la flamme sous le brûleur. Si cela se produit, arrêter le réchaud immédiatement et le déplacer dans un endroit à l'abri du vent.



Lors de l'entreposage du réchaud, la cartouche de gaz doit en être séparée.



8.1 Pokiaľ nejakú vadu nie je možné napraviť podľa tohto návodu, vráťte spotrebič miestnemu predajcovi.

8.2 Nikdy sa nepokúšajte vykonávať žiadnu inú údržbu alebo opravy.

8.3 Spotrebič nikdy neupravujte. Mohlo by dôjsť k tomu, že sa spotrebič stane nebezpečným.

## **9. NÁHRADNÉ DIELY A PRÍSLUŠENSTVO**

9.1 Používajte iba náhradné diely a príslušenstvo značky Primus. Pri inštalácii náhradných dielov a príslušenstva budte opatrní. Nedotýkajte sa horúcich dielov.

9.2 Náhradné kartuše: S týmto prístrojom používajte iba propánbutánové plynové kartuše Primus 2206, 2202 alebo 2207.

9.3 Náhradné diely

734350 Tryska

732440 Tesniaci krúžok

9.4 V prípade problémov pri získavaní náhradných dielov alebo príslušenstva sa poradte s distribútorom vo vašej krajine. Navštívte stránky [www.primus.eu](http://www.primus.eu)